



Installation Instructions

Aclare
Under Counter
Water Filter System



1. Unpack and Unwrap Contents

Turn off and disconnect the cold water supply.

2. Faucet Installation

Install as shown in **Figure A**. Tighten faucet nut to secure faucet with a wrench. The faucet may be mounted using an existing hole for a sprayer nozzle, or by drilling a $\frac{7}{8}$ " hole in the sink or countertop.

NOTE: It is not recommended drilling granite or porcelain sinks unless done by a professional. Be sure the location of the faucet allows the spout to extend slightly past the edge of the sink.

3. Attach Brass Tee

Attach threaded ends of the supplied tee to the cold water supply line and shut-off valve as shown in **Figure B**; tighten using a wrench.

4. Attach Red Hose to the Tee


Slide the compression nut onto the red tubing (with threads of the nut facing the end of the red hose). Next, slide the plastic sleeve onto the red tube. Place brass insert into the opening of red hose. Push the tip of the red tubing into the opening of the brass tee. While holding the red tube in place inside the brass tee, tighten the compression nut to compress the plastic sleeve and create a seal (**Figure C**).

NOTE: Use a wrench to ensure complete seal. Avoid over-tightening.

5. Water Filter Unit Installation

Select a space under the sink for the filter unit that is at least 12 inches from the bottom of the cabinet that allows easy access to the cold water supply and for replacing the filter cartridges. Use the mounting bracket holes to mark the securing screw placements with a pencil. Use a $\frac{7}{32}$ " drill bit to drill pilot holes for the plastic anchors provided. Carefully tap the anchors into the holes with a hammer. Mount the bracket to the wall with the supplied screws.

Figure A

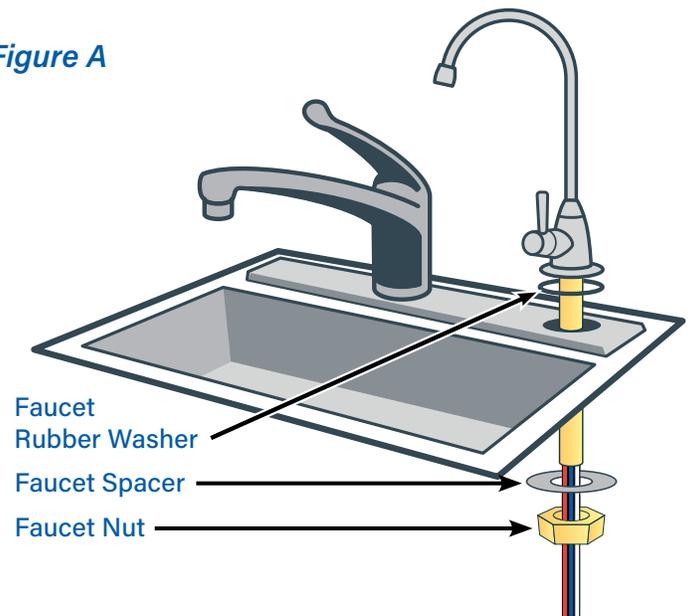

NOTE: Follow the directional arrow on the face of the bracket for orientation. Place the water filter unit into the bracket with labeling on top of unit readable (**Figure D**).

6. Connect the Supply Lines

Push the blue hose into corresponding blue connector marked **OUT (B)**. Push the white hose into connector marked **IN (A)**.

7. Check for Proper Installation

Turn the cold water on. Place a towel under the filter unit to help detect any leaks. If any are present, turn off the water and check to ensure good contact between hoses and connectors. Once you're sure of the installation and no leaks are present, run the cold water for 10 minutes to flush carbon fines.

NOTE: For the first 72 hours the faucet will drip intermittently, until the filters become fully saturated. Once they are saturated, you should anticipate a residual flow of water each time you use the filter, as the system is vented and designed to self-clear the line.

IMPORTANT: This product **cannot** be used in constant pressure applications such as ice-makers or fountains.

Figure B

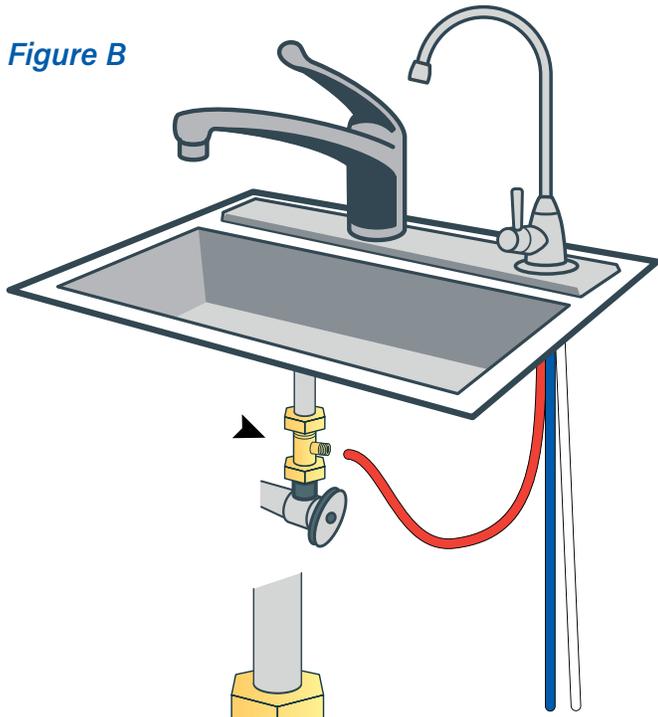


Figure D


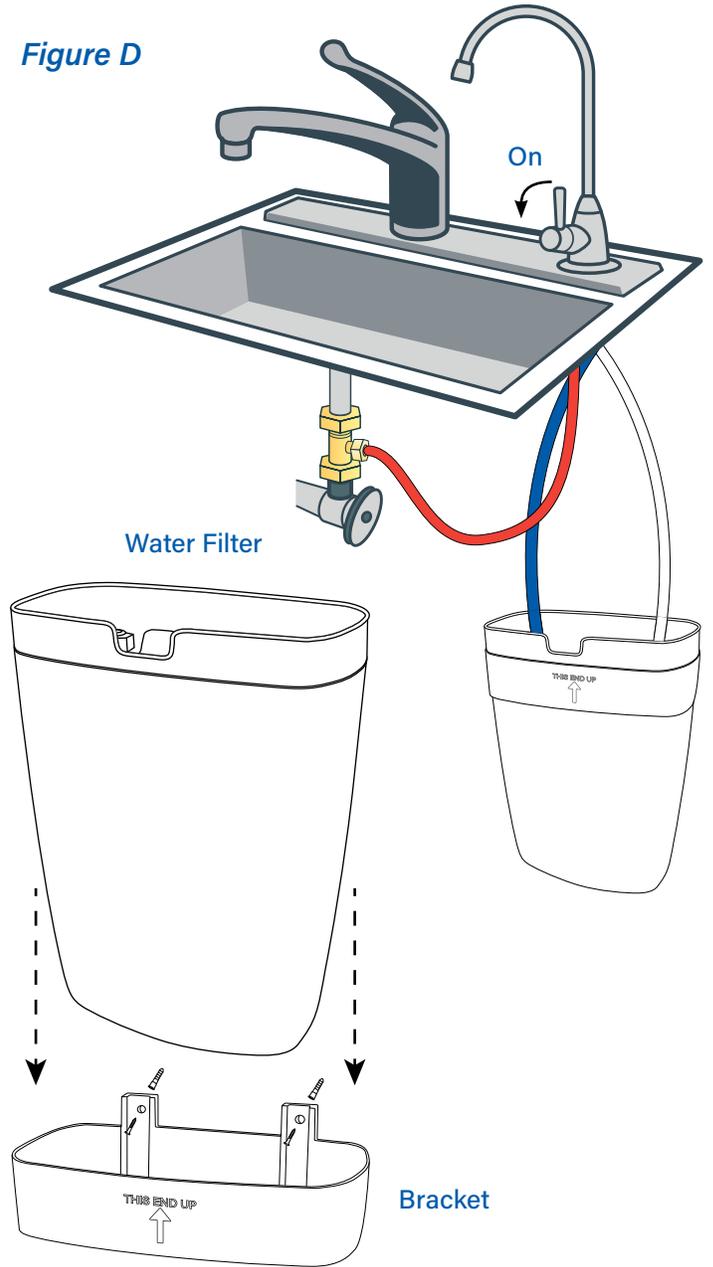



Figure C

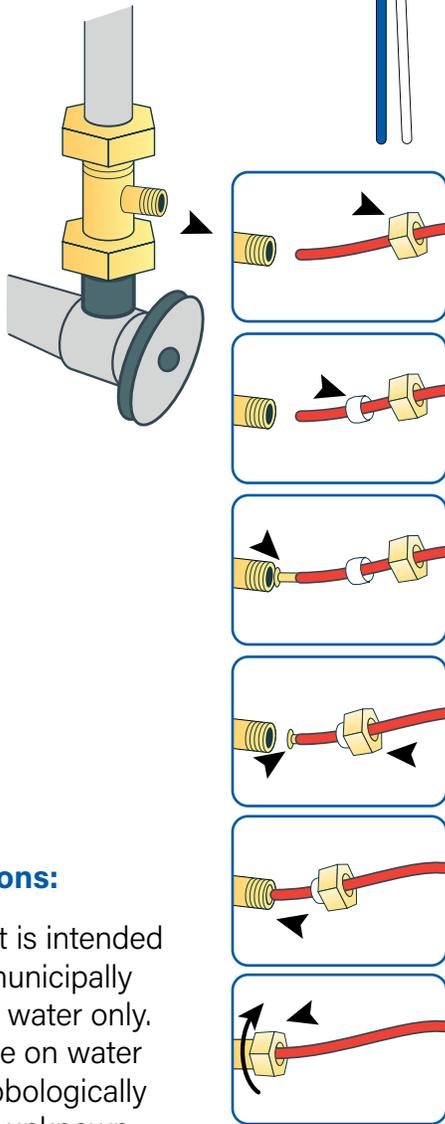

Specifications:

This product is intended for use on municipally treated cold water only. **DO NOT** use on water that is microbologically unsafe or of unknown quality without adequate disinfection before or after the system.

- This system and installation shall comply with applicable state and local regulations.

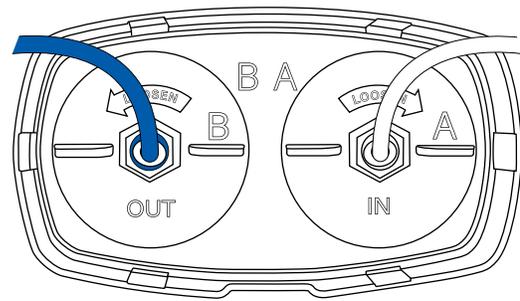

Top View

Min Operating Pressure: 20 psi (pounds per sq in)
Max Operating Pressure: 50 psi (open discharge)
Min Operating Temperature: 40° F (4° C)

Max Operating Temperature: 90° F (32° C)
Rated Service Flow: 0.4 gallons per minute
Capacity of Filter Cartridge: 500 gallons

OWNER'S LIMITED WARRANTY

Waterwise warrants, to the original purchaser, this product against defects in materials and/or workmanship, for a period of one (1) year from the date of purchase. Defects or failures due to shipping/handling, incorrect installation, improper use or maintenance, including abuse or neglect, accidents, alterations or modifications, or unauthorized repair are specifically excluded from this warranty. No dealer, distributor, agent, representative, or other person is authorized to extend or expand this warranty.

Waterwise is not responsible or liable for personal injury, property damage, or incidental or consequential damages arising out of, or in connection with, the use or performance of the product or other damages with respect to loss of use, or costs of removal, installation, or reinstallation.

Waterwise will, at its option, replace or repair the defective part(s) without charge, provided they are returned, transportation prepaid by owner, to an authorized service facility or to the address below. Enclose a letter describing the problem, copy of dated proof of purchase, and your name, address and daytime telephone number.

This limited warranty does not guarantee uninterrupted service. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. This limited warranty is in lieu of all other warranties, expressed or implied, including, but not limited to, any implied warranty of merchantability or fitness for a particular use or purpose. This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province.

Outside the United States, a different warranty may apply. For details, please contact your authorized Waterwise distributor.

Your water filter system is designed and tested for use with genuine Aclare parts, including replacement filters and all hardware. Use of parts from other manufacturers may result in loss of contaminant reduction performance, system damage or failure. Use of parts from other manufacturers will also void your warranty.

Visit www.healthyperceptions.com for all replacement parts.

Waterwise® Inc
3608 Parkway Blvd
Leesburg FL 34748-9399
1-888-340-0247
www.healthyperceptions.com